



INSTALL REPLACEMENT FACE PLATE LEAKSTOP+

INSTRUCTIONS:

1. UNPLUG LEAKSTOP POWER SUPPLY.
2. REMOVE 4 COVER SCREWS.
3. PULL FACE COVER ASSEMBLY AWAY FROM ACTUATOR HOUSING.
4. REMOVE SENSOR WIRES FROM TERMINAL BLOCK.
5. REMOVE POWER CONNECTIONS FROM TERMINAL BLOCK.
6. UNPLUG YELLOW, BLUE, BLACK AND RED WIRES FROM BLADE CONNECTORS ON BOARD.
7. REMOVE FACE PLATE ASSEMBLY.
8. REATTACH CABLES TO NEW FACE PLATE ASSEMBLY AS SHOWN IN THE WIRE DIAGRAM.
9. SEAT FACE PLATE ONTO ACTUATOR HOUSING, ENSURING NO WIRES ARE PINCHED.
10. INSTALL 4 COVER SCREWS AND SECURE FACE PLATE ASSEMBLY.
11. PLUG-IN POWER SUPPLY AND TEST THE UNIT FOR PROPER OPERATION.

