



**WARNING:**  
**Make All Connections**  
**Before Applying Power**  
**At Any Point.**

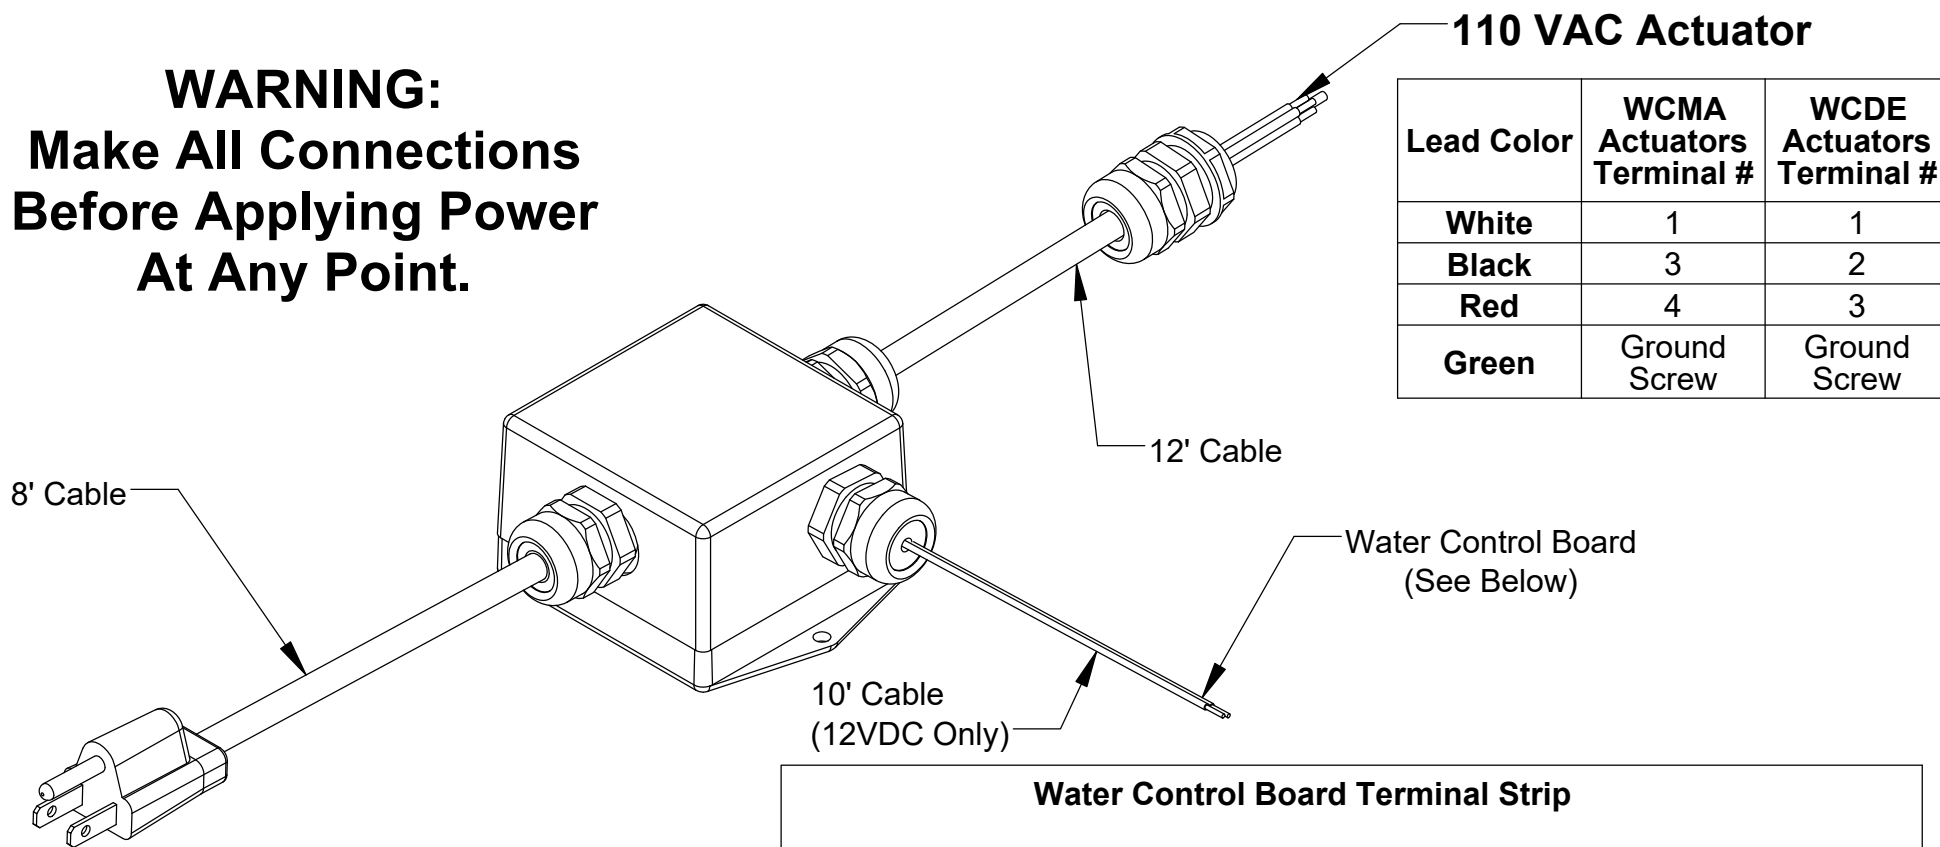

## Instructions:

- 1) Remove indicator arrow and top cover from actuator to expose the terminals for wiring.
- 2) Guide the four leads for the actuator through the side port of the actuator and thread the strain relief into the port.
- 3) Make connections in the actuator terminals according to the table above to the right.
- 4) Replace the actuator cover and indicator arrow.
- 5) Wire the Water Control Board with jumpers and wire the leads from the RK110VAC into the terminals as shown.
- 6) Apply power to the RK110VAC and the Water Control Panel.

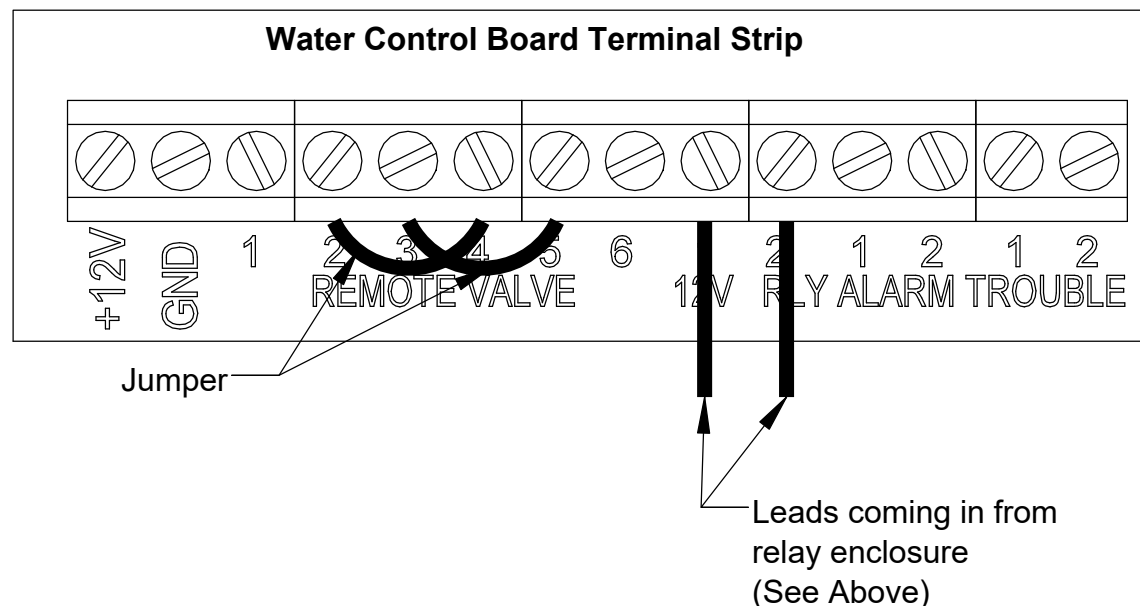

**! WARNING! Keep fingers and other objects away from valve to avoid injury. !**

- 7) Program and test sensors then complete installation as usual.