


Instructions:


1. Unplug WaterCop power cord.
2. Remove 4 cover screws.
3. Pull face cover away from control box.
4. Unplug wire harness from PCB.
5. Disconnect power wires (terminal strip).
6. Attach power wires into new PCB terminal strip (Note Polarity).
7. Plug wire harness into new PCB.
8. Attach cover assembly to case using the 4 cover screws.
9. Plug in power cord and test unit for proper operation.

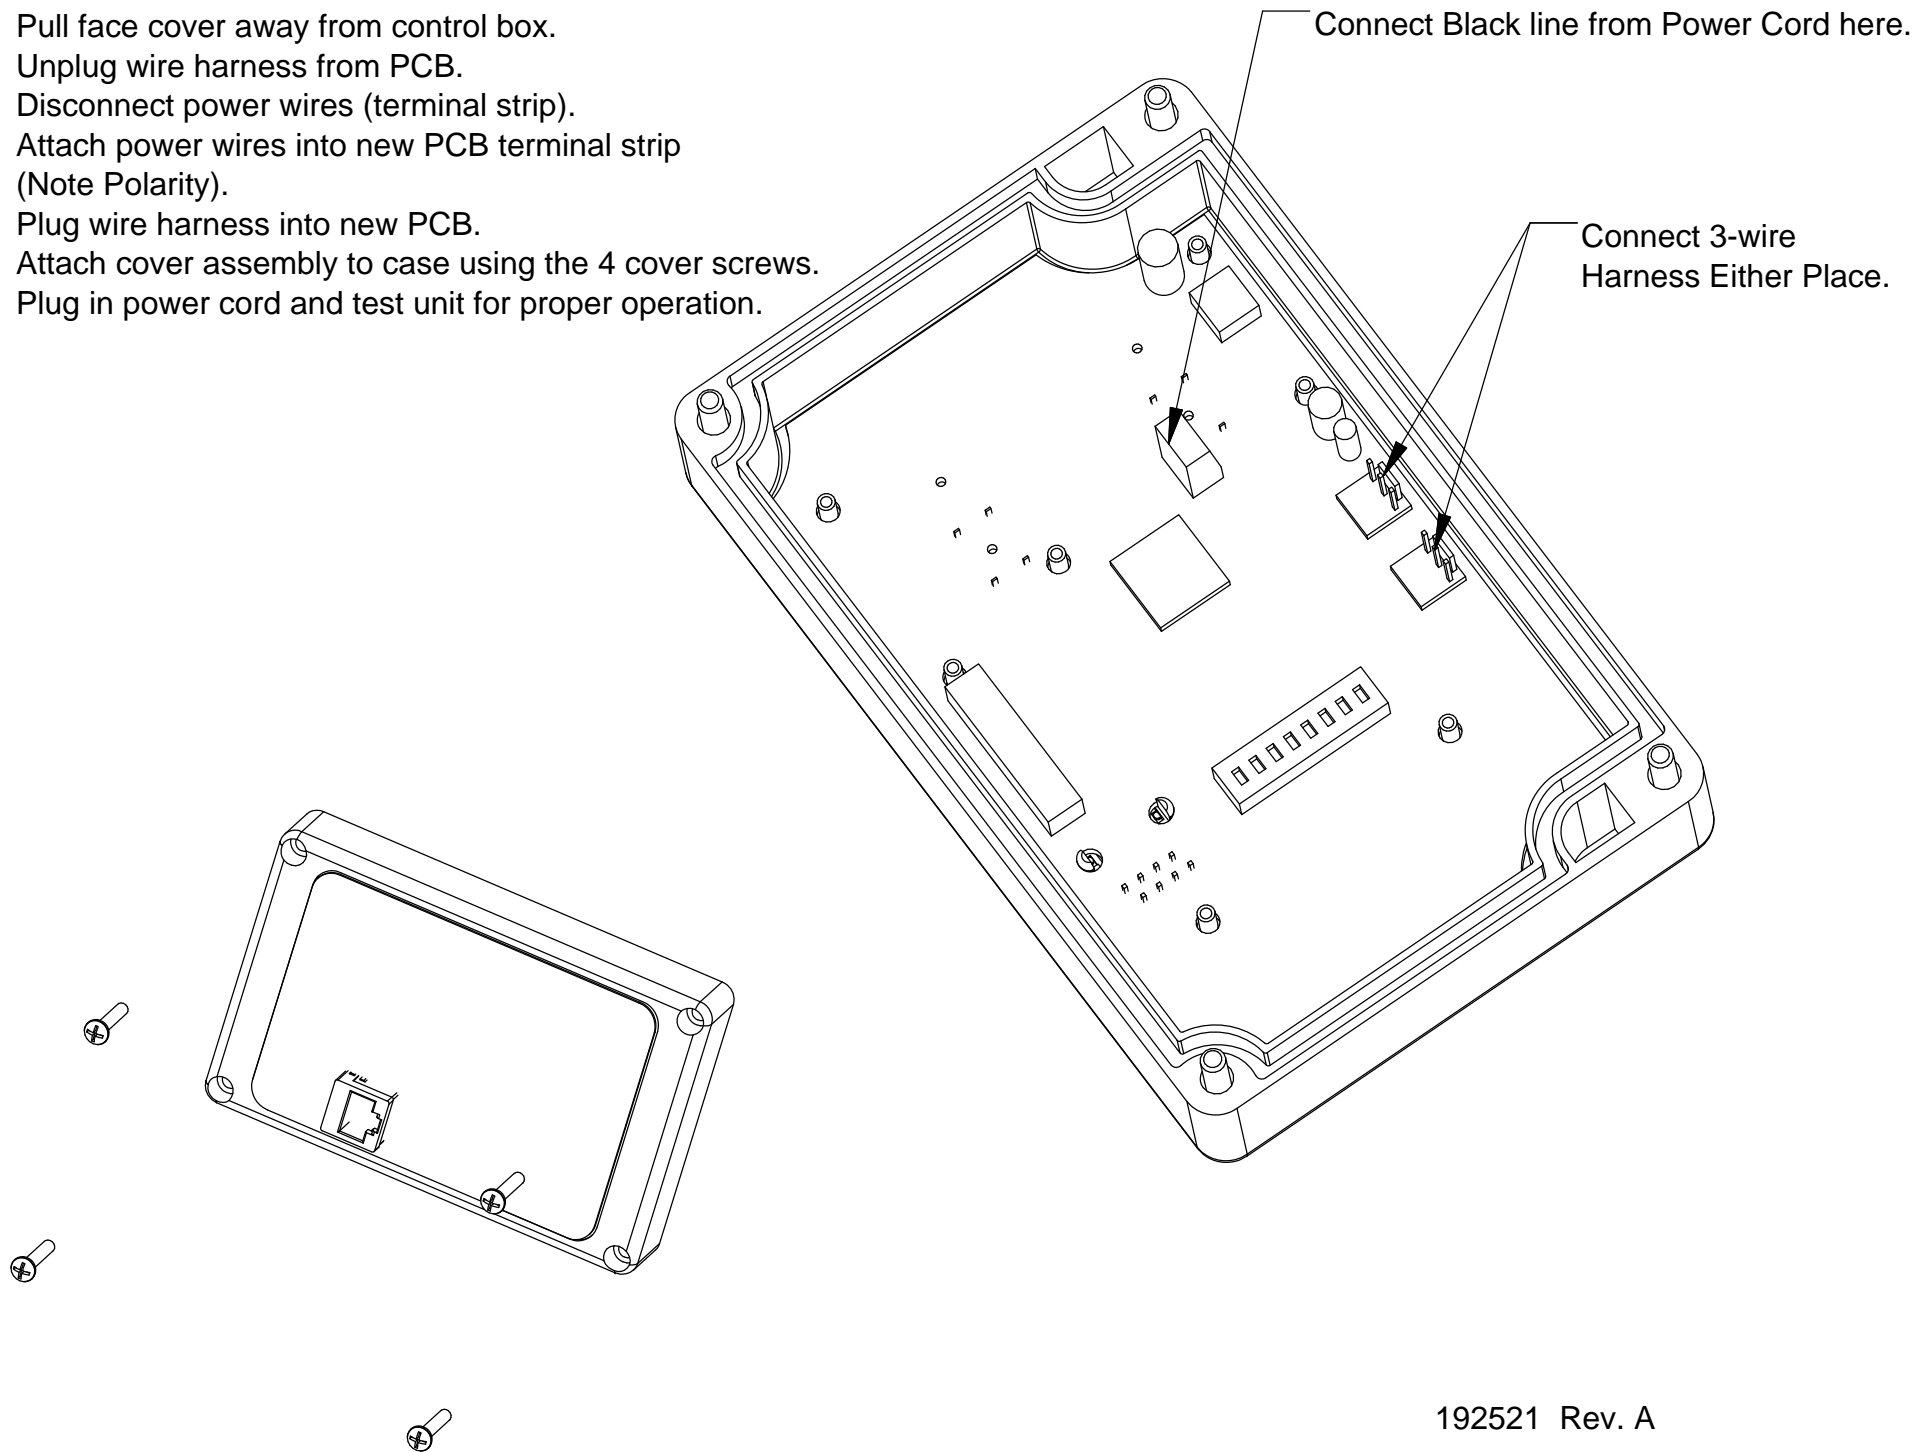

192521

Instructions:

1. Unplug WaterCop power cord.
2. Remove 4 cover screws.
3. Pull face cover away from control box.
4. Unplug wire harness from PCB.
5. Disconnect power wires (terminal strip).
6. Attach power wires into new PCB terminal strip (Note Polarity).
7. Plug wire harness into new PCB.
8. Attach cover assembly to case using the 4 cover screws.
9. Plug in power cord and test unit for proper operation.

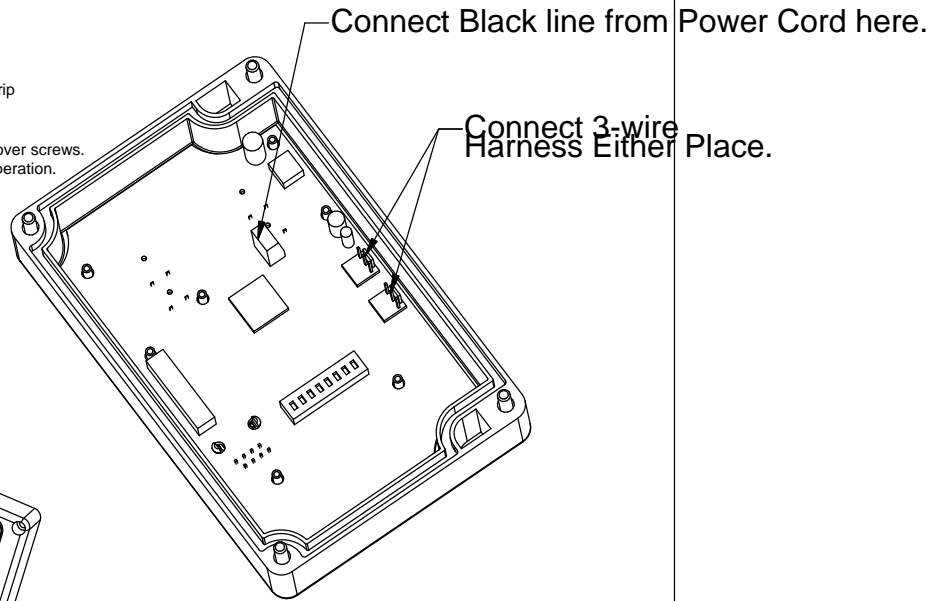

8.500

11.000

192521 Rev. A

MATERIAL	White Bond Paper					NO. 192521	FILE NO.	DO NOT SCALE								
	FINISH								TITLE							
Black Ink					WCD Replacement Face Instruction Sheet											
UNLESS OTHERWISE SPECIFIED: ALL MACHINED SURFACES TO HAVE 125 RMS FINISH BREAK ALL CORNERS .005/.010 X 45° INTERNAL CORNER RADII .010 MAX. R. UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS ARE IN INCHES. TOLERANCES ARE: ANGLES +/- 2 DEG. X +/- .100 FRACTIONS +/- .015 .XX +/- .015 .XXX +/- .005																
								A	C024	10-27-15	DR	DATE	CHKD	DATE	ENGR	DATE
					LET	ECO	DATE	LET	ECO	DATE	MWS	10-26-15	MWS	10-26-15	MWS	10-26-15
					THIS PRINT IS THE PROPERTY OF DYNAQUIP CONTROLS AND SHALL NOT BE COPIED, REPRODUCED, LOANED, OR DISPOSED OF DIRECTLY OR INDIRECTLY, NOR USED FOR ANY PURPOSE OTHER THAN THAT FOR WHICH IT IS SPECIFICALLY FURNISHED EXCEPT BY WRITTEN PERMISSION OF DYNAQUIP CONTROLS.											