



**CAUTION: DO NOT POWER THE CONTROL UNIT  
UNTIL ALL WIRING CONNECTIONS ARE MADE AND  
INSTALLATION IS COMPLETE.**

## **WIRING INSTRUCTIONS Z-WAVE 12 VDC LARGE VALVE INTEGRATION**

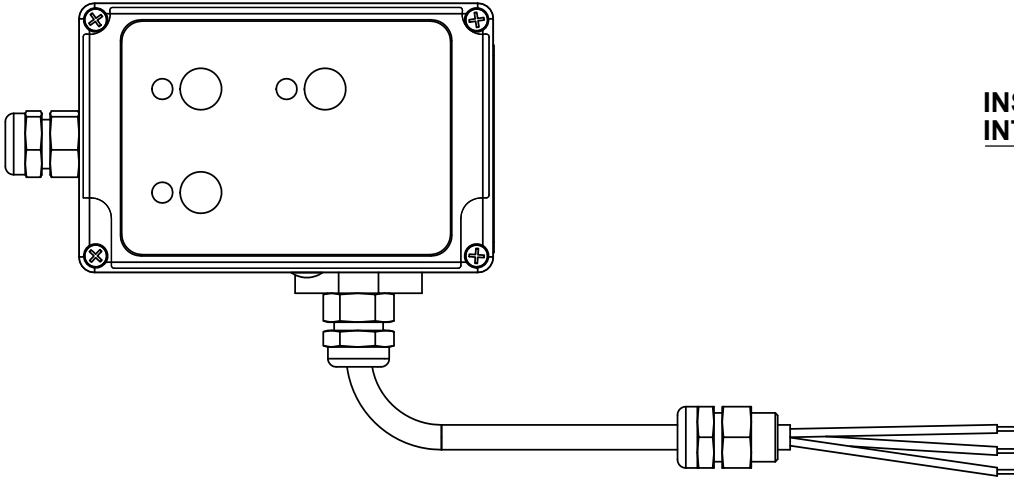

**INSTALL CABLE RESTRAINT  
INTO ACTUATOR HOUSING**

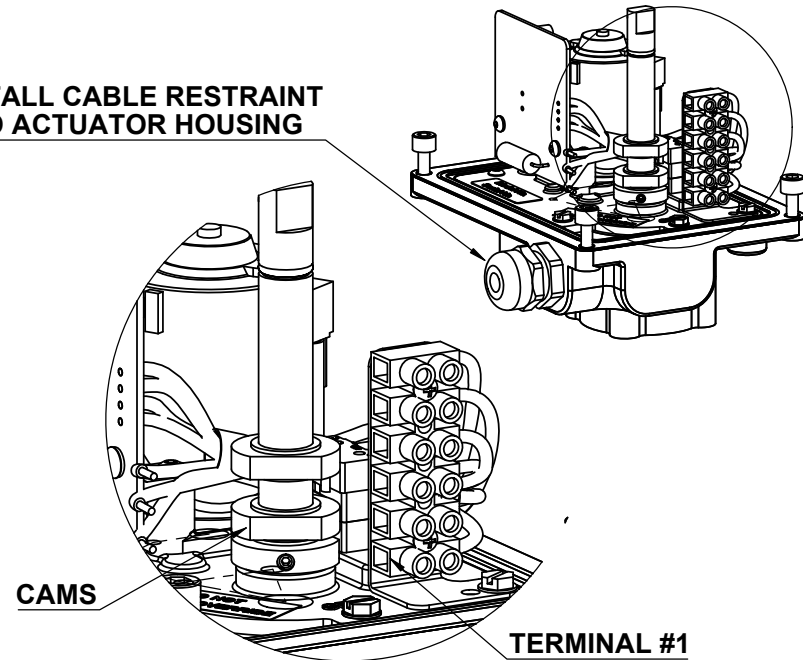

**FEED CABLE THROUGH CABLE RESTRAINT  
AND ATTACH LEADS TO TERMINAL BLOCK  
AS FOLLOWS: NOTE THE LOWEST TERMINAL IS NO. 1  
1 - BLACK  
2 - WHITE  
3 - GREEN**

**NOTE: ROUTE WIRES AWAY FROM CAMS AND TIGHTEN CABLE RESTRAINT**