



WATERCOP CLASSIC PVC WIRING GUIDE

PVC WIRING INSTRUCTIONS
WC CLASSIC 12 VDC

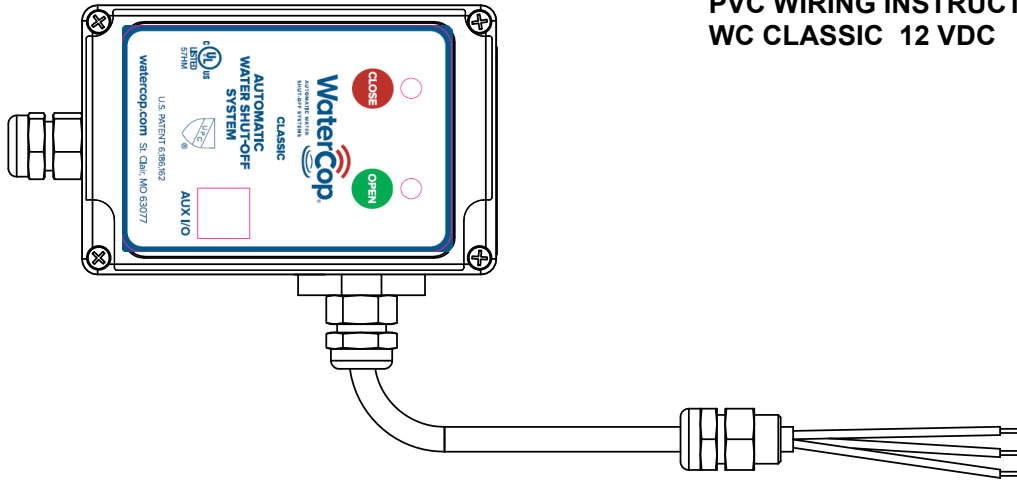

**CAUTION: DO NOT POWER THE CONTROL UNIT
UNTIL ALL WIRING CONNECTIONS ARE MADE AND
INSTALLATION IS COMPLETE.**

**INSTALL CABLE RESTRAINT
INTO ACTUATOR HOUSING**

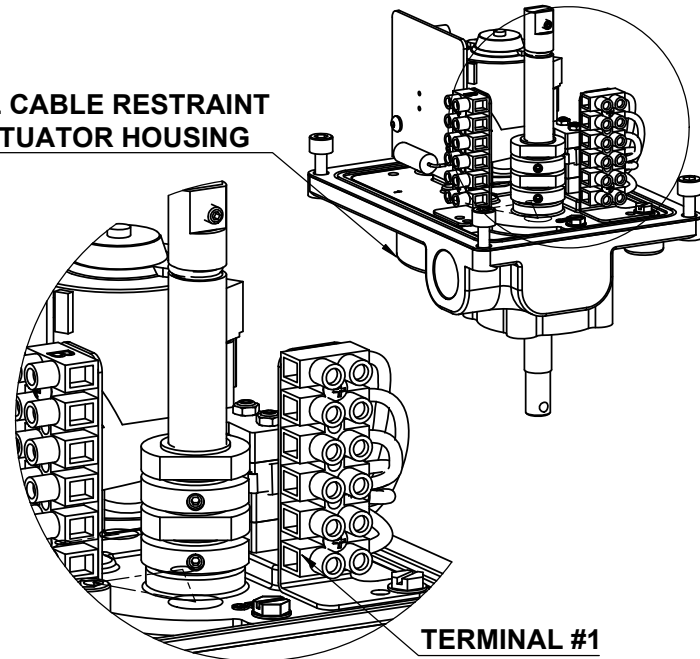

**FEED CABLE THROUGH CABLE RESTRAINT
AND ATTACH LEADS TO TERMINAL BLOCK
AS FOLLOWS: NOTE THE LOWEST TERMINAL IS NO. 1**
1 - BLACK
2 - RED
3 - WHITE

NOTE: ROUTE WIRES AWAY FROM CAMS AND TIGHTEN CABLE RESTRAINT