



# WATERCOP PRO WIRING GUIDE

## 12 VDC SYSTEM

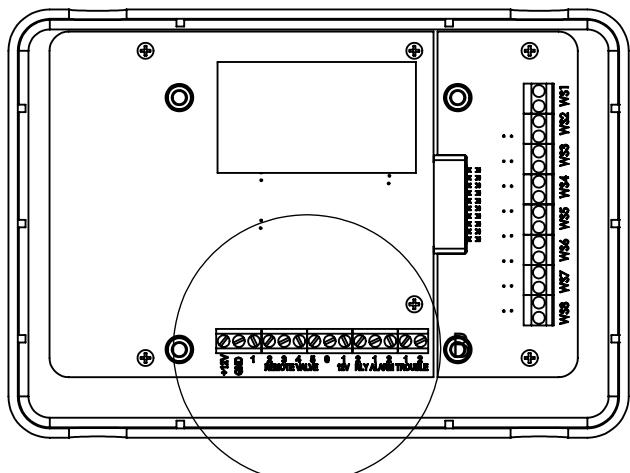


**CAUTION: DO NOT POWER THE CONTROL PANEL  
UNTIL ALL WIRING CONNECTIONS ARE MADE AND  
INSTALLATION IS COMPLETE.**

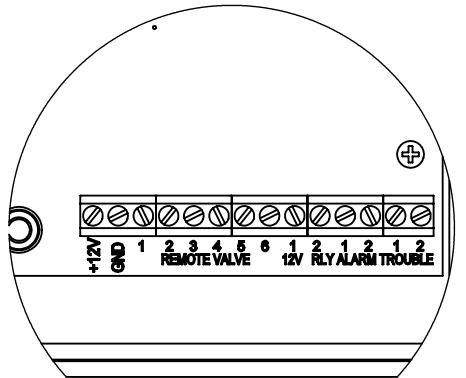

**INDOOR CABLES 192596.025 / 192596.050 / 192596.075  
OUTDOOR CABLES 192600.025 / 192600.050 / 192600.075**

**INSTALL CABLE RESTRAINT  
INTO ACTUATOR HOUSING**

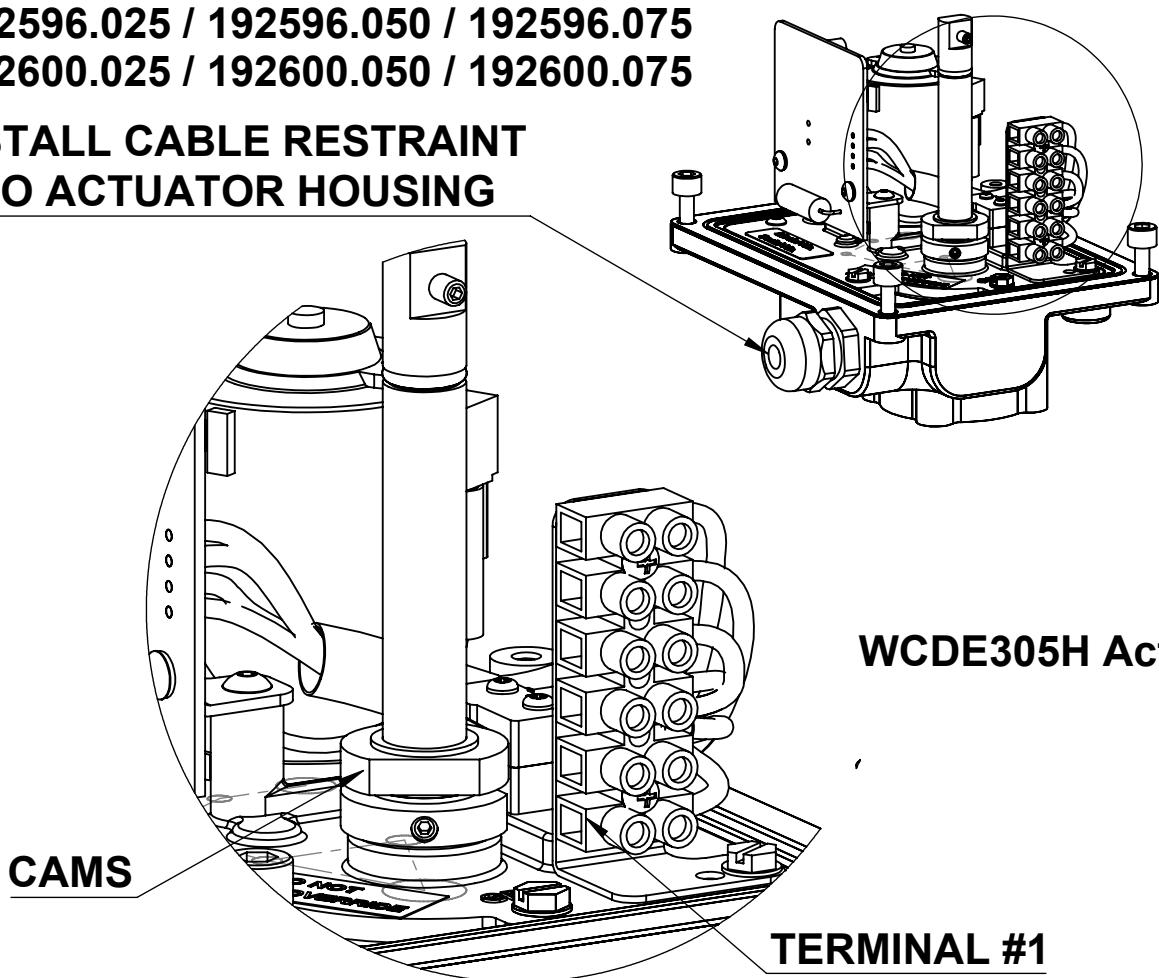

**REMOVE JUMPERS FROM TERMINALS 2, 3, 4 & 5  
ATTACH CABLE LEADS TO  
REMOTE VALVE TERMINALS  
AS FOLLOWS:  
1 - BLACK  
2 - RED  
3 - GREEN  
4 - BROWN / YELLOW FOR OUTDOOR  
5 - WHITE  
BLUE LEAD IS NOT USED**

**FEED CABLE THROUGH CABLE RESTRAINT  
AND ATTACH LEADS TO TERMINAL BLOCK  
AS FOLLOWS: NOTE THE LOWEST TERMINAL IS NO. 1  
1 - BLACK  
2 - RED  
3 - GREEN  
4 - BROWN / YELLOW FOR OUTDOOR  
5 - WHITE  
BLUE LEAD IS NOT USED**

**NOTE: ROUTE WIRES AWAY FROM CAMS AND TIGHTEN CABLE RESTRAINT**