



WATERCOP PRO PVC WIRING GUIDE 12 VDC SYSTEM

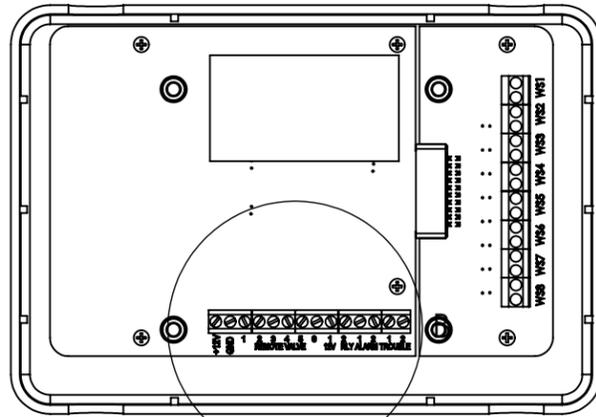


CAUTION: DO NOT POWER THE CONTROL PANEL UNTIL ALL WIRING CONNECTIONS ARE MADE AND INSTALLATION IS COMPLETE.

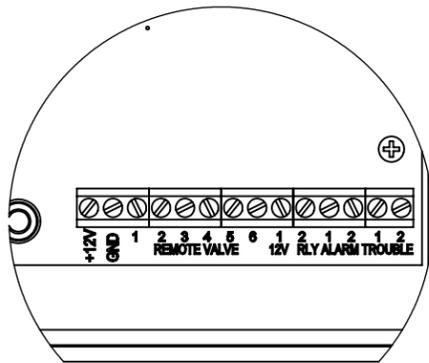

REMOVE JUMPERS FROM TERMINALS 2, 3, 4 & 5
ATTACH CABLE LEADS TO
REMOTE VALVE TERMINALS
AS FOLLOWS:
1 - BLACK
2 - RED
3 - GREEN
4 - BROWN / YELLOW FOR OUTDOOR
5 - WHITE
BLUE LEAD IS NOT USED

INDOOR CABLES 192596.025 / 192596.050 / 192596.075
OUTDOOR CABLES 192600.025 / 192600.050 / 192600.075

**INSTALL CABLE RESTRAINT
INTO ACTUATOR HOUSING**

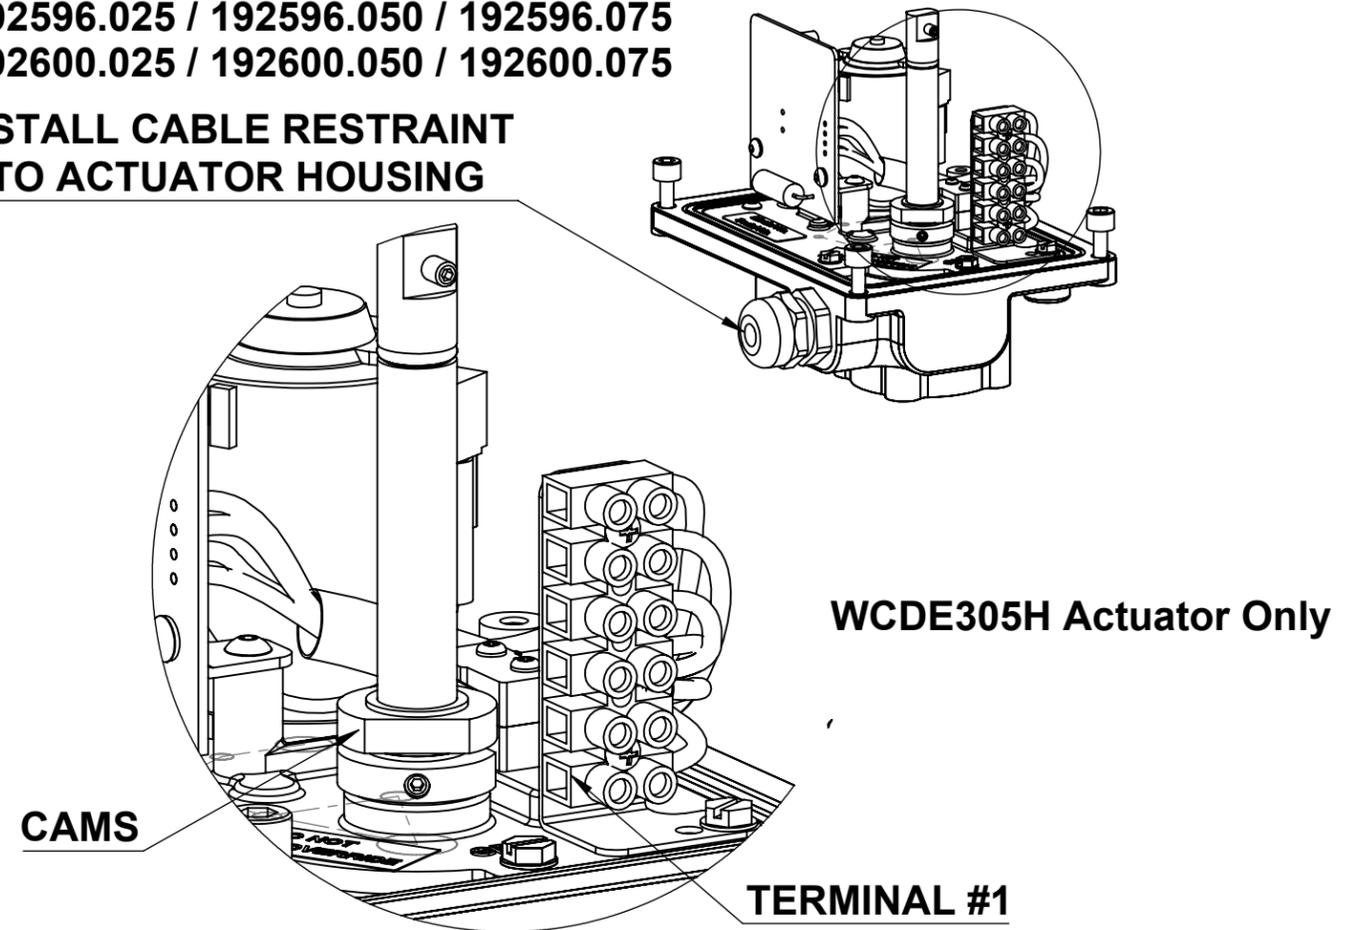

FEED CABLE THROUGH CABLE RESTRAINT
AND ATTACH LEADS TO TERMINAL BLOCK
AS FOLLOWS: NOTE THE LOWEST TERMINAL IS NO. 1
1 - BLACK
2 - RED
3 - GREEN
4 - BROWN / YELLOW FOR OUTDOOR
5 - WHITE
BLUE LEAD IS NOT USED

NOTE: ROUTE WIRES AWAY FROM CAMS AND TIGHTEN CABLE RESTRAINT